



Infrared audio transmission systems

Interference-free and secure supply of rooms and halls with audio signals – also for use in confidential areas

AUDIOropa

AUDIOropa

AUDIOropa



Intro: Inductive loop systems and their use 5

Emitters

PRO IR-202 – Infrared emitter and modulator unit for medium sized rooms 7

PRO IR-400 – High-performance infrared emitter:
Two-channel emitter for the supply of large rooms and halls 9

Receivers

PR-22+ – High performance pocket receiver for infrared signals – for connection of
various hearing components..... 11

RCI-102 – Convenient portable stethoset receiver for infrared audio signals 11

IP112 – Headphones with inbuilt 2-channel IR receiver 13

Accessories

Technical Components / Accessories 15



How an IR transmission system works

An IR audio transmission system consists of at least one emitter and one receiver. The emitter is connected to an audio source – to a microphone system, for example – and transmits the signals received in the form of infrared light impulses wirelessly to the receiver, which converts the light impulse received into electrical audio signals and feeds them into the reproduction device connected – into headphones, for example, or a teleloop for the inductive direct transmission to hearing aids.

- The emitter does not focus the emission of the infrared light impulses, i.e. it uses a very large transmission angle. As a result, there is generally no need for a specific »line of sight« between the emitter and the receiver.
- The signals do not only travel directly between the emitter and the receiver, but are also reflected from walls, ceilings and floors. Nevertheless, pillars and furniture – depending on their size and position – can interfere with or even block reception under certain conditions.

In any case, a technically correct, precise positioning of the emitters is required for optimal signal coverage.

Areas of application

As an alternative to radio transmission systems, infrared transmission technology has proven itself in certain professional applications:

- Venues and facilities, in which the confidentiality of the information exchanged there plays a decisive role, for example in courtrooms or conference rooms

- Areas, in which several transmission systems are operated parallel to one another in neighbouring rooms, such as in multiplex cinemas.

In addition, infrared audio transmission systems are used in areas where very high radio emissions can interfere with radio transmission techniques.

Benefits

- Infrared light signals cannot pass through walls, which limits reception to the room in which the emitter is installed.
- Transmission is reliable and absolutely free of the interference caused by electromagnetic fields or structural elements in the building, such as metal reinforcements. In addition, these systems do not produce any electromagnetic emissions themselves.
- Infrared transmission systems can be used easily in many different countries; an obligation to register them, similar to the allocation of radio licenses, is not required.


Transmission ranges

High-performance infrared emitters from the AUDIOropa range described in this product overview, are able to provide a coverage for up to 2,600 m².

Further characteristics

- Portable/mobile systems are available.
- Multi-channel operation provides for flexible use, making it possible to simultaneously transmit several different languages, for example.

Function and use of infrared transmission systems

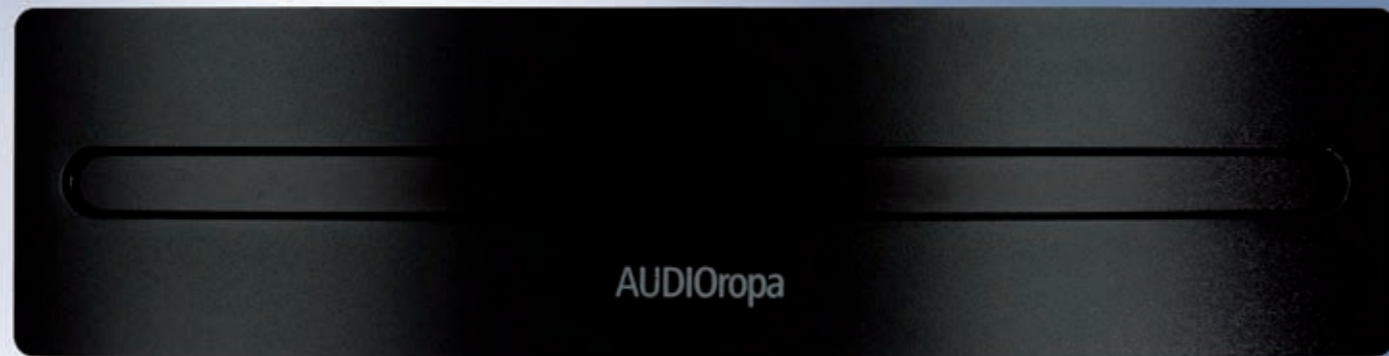

The »PRO IR-202« two-channel infrared emitter combines infrared modulator and emitter technology into a single mountable enclosure - which reduces operating costs, eliminates the need for rack space and eases set-up.

The »PRO IR-202« is ideal for high-quality audio programs such as music, theater and audio description. The »PRO IR-202« will accept any line level, balanced or unbalanced audio inputs.

Infrared receivers detect the transmission and convert the light signals back into audio signals. The 2.3/2.8 MHz operating frequencies minimize interference caused by high-efficiency lighting equipment.

A further »PRO IR-202« emitter can be connected for additional coverage area. Power and audio signal are shared between the emitters via the according connection cables. All necessary cables are included.

The transmission energy of PRO IR-202 Transmission/Modulator unit (Master) is spread in a club-shape in the room with a broad aperture angle (see illustration bottom right). The audio transmission is interfer-

ence-free due to the infrared signal modulation in 2.3 and/or 2.8 MHz. The combination of the PRO IR-202 with a further PRO-IR-202 emitter, set up as a slave, increases the range and the dispersion angle of the infrared signals to up to 240°.

A set for ceiling and wall mounting is included in the package. A tripod (Art.-No: A-4986-0) is available as an accessory.

Combined operation

Combining two PRO IR-202 is achieved with the included installation kit. The units mounted on top of each other can be freely turned to the required angles to achieve optimal signal supply in the room. The range of the Master with 2 Slave units is up to 560 m² at one-channel transmission - ideal for large rooms.

With the selection of the suitable receiver type (RCI-102, PR-22+ or IP112) the range can be further influenced, depending on the sensitivity of the receiver diodes.

»PRO IR-202«

Infrared emitter and modulator unit for medium sized rooms

- Broad exit angle of infrared signals
- Configuration with 1 and/or 2 channel transmission
- Combined use: Up to two PRO IR-202 emitters can be unified into a Master/Slave unit
- Power supply of Slave unit via a connection cable through the master unit
- Operation of Master-Slave configuration with a single power supply unit
- Usable as a fixed (wall or ceiling mount) or movable installation (e.g. tripod)

PRO IR-202 · Specifications

Item no.: A-4082-0

■ Power supply

Power supply Master: power supply unit input: 100-240V AC, 50-60 Hz, Exit: 48V DC, 0.5A (2.5 mm barrel plug, centre contact »positive«)
Slave: power supply via direct connection cable from Master

Connection cable 2 x hollow plug 2,5 mm

Carrier frequency 50 kHz to 8 MHz

Infrared transmission power 0,7 W

Ranges / Supply areas Transmission/Modulator unit (Master): 1-channel operation 180 m²
Note: The emitter cannot be used without the transmission/modulator unit.
One transmission/modulator unit (Master) + one emitter (Slave): 1-channel operation 370 m²

■ Input

As Master Line-input: Cinch channel 1 and channel 2
Microphone input: 3.5 mm jack plug, sensitivity adjustable via control dial

As Slave 6,3 mm stereo jack

■ Output

Master: 6,3 mm stereo jack and DC power out

■ Function display

LED Power supply/equipment status (green LED)
Transmitting/cable status (yellow LED)
The LED displays can be switched off with slide switch.

■ Mechanical data

Ambient conditions 0 – +50 °C ambient temperature (non-condensing, non-corrosive environment)

Mounting types Wall or ceiling mount: installation kit BKT 024 microphone stand

Dimensions 254 x 79 x 64 mm (B x D x H) incl. front panel

Color black with white lettering, red acrylic stripe. White front panel also included

Weight 300 g

Certification CE, FCC, WEEE, RoHS



The two-channel infrared emitter PRO IR-400 combines the modulator and emitter in one single unit. This design saves costs and can be mounted in limited spaces.

The infrared light exists in a wide angle, which spreads efficiently throughout the supplied areas in the club-shape typical for this transmission method.

The steady transmission of the PRO IR-400 is realised at a working bandwidth of 2.3 and 2.8 MHz without the interference of ambient light. In 1-channel mode, the emitter supplies areas of up to 900 sqm. Adding further PRO IR-400 emitters into the setup allows the receiving range to be expanded easily. The package includes an attachment set for wall and ceiling. Tripods are also available for a free-standing and portable installation.

Expanding the system

If the coverage of a larger room is required (for example a conference hall), it is possible to connect further »PRO IR-400« emitters (Slaves), linked to the primary emitter (Master). The devices are linked by connecting the according Sync-Out-ports of the first emitter to the Sync-In-ports of the next emitter.

Receiving and listening components

For the reception of the infrared transmitted audio signals and for the conversion of the infrared signal into audible sound appropriate receivers are necessary – for example the underchin receiver RCI-102, the pocket receiver PR-20+ for the connection of all commercially available headphones or the IR receiver headphones IP-112.

»PRO IR-400«

High-performance infrared emitter: Two-channel emitter for the supply of large rooms and halls

- Input Auto-Level Control (ALC)
Range: 250 mV to 6V
- Effective area covered: 200 m²
(in closed rooms)
- For wall mounting or tripod use
- -Synchro-signal interface for easy expansion
- Optional dual channel

Ideal for

- Cinemas
- Parallel transfer of two different languages (channel selection)
- Conference and meeting rooms, multimedia rooms
- Court rooms and lecture halls
- Schools, universities
- Churches

PRO IR-400 · Specifications

Item no.: A-4026-0

Dimensions (WxHxD)	41.2 x 32.7 x 7.5 cm
Weight	1,100 g
Colour Housing	Anthracite / front panel: dark red transparent
Power supply adapter	Primary 230 V~ 50-60 Hz, secondary 28 V DC
DC-input	Low-voltage connector, 28 V DC, middle is »+«-Pol
Power consumption	700 mA
Carrier frequencies	2.3 MHz (left or A-channel) and 2.8 MHz (right or B-channel)
Input impedance	Audio-In: 18 kΩ / Mic-In: 1.3 kΩ
Trigger voltage of the Audio-In:	110 mV
Input level display	Mic-In: 1.5 mV
Total range at +/- 3 dB	Lower limit: 400 mV
Upper limit:	6 V
Audio-Inputs	Cinch (RCA) for left and right and/or A and B-channel
Sync-in / Sync-Out	Cinch (RCA) for left and right and/or A and B-channel
Microphone input	6.4 mm Stereo-jack plug
Audio display	Input level-LEDs, one per channel.
Transmission range	30 metre, closed room
Temperature range	0-40 °C
Attachment	Wall attachment with conventional hooks, Tripod attachment via standard screw attachments
Conformities	CE, WEEE, RoHS
Compatible receiver	RCI-102, IP112

»PR-22+«



The »PR-22+« features Automatic Gain Control and very high sensitivity for incoming infrared signals. The high maximum output volume makes it an ideal receiver for people with impaired hearing.

The 3.5 mm audio jack allows the connection of a wide range of different audio components, such as:

- Underchin headphones
- Light-weight headphones
- Earphones
- Neckloops
- Direct audio links for e.g. CI-systems

»PR-22+«

High performance pocket receiver for infrared signals – for connection of various hearing components

PR-22+ · Specifications

Item no.: A-4037-0

Frequency range	60 Hz to 12 kHz ± 3 dB
Receiver frequencies	3.8 MHz • 3.3MHz • 2.8 MHz • 2.3 MHz (switchable)
Distortion	< 1%
signal-to-noise ratio	60 dB
max. volume	120 dB
Reception angle	360°
Weight	ca. 200 g (incl. batteries)

»RCI-102«



The RCI-102, is an ergonomically designed under-the-chin receiver that weighs just 52 grams and is equipped with swivelling earpieces, which means that the earpieces retain their position in the ear even when the user turns his/her head. The soft flexible material of the ear buds nestles gently into the auditory canal to effectively subdue ambient noise.

The RCI-102 is equipped with a switch to select the frequency channels. Both channels can be used simultaneously for stereo transmissions. If the event organizer uses the 2.3 MHz and the 2.8 MHz channels separately, in order to transmit in two different languages at the same time, the listener can select the channel in his/her preferred language and receive the information in mono mode.

Selectable stereo or mono reception, e.g. for multi-language transmissions.

»RCI-102«

Convenient portable stetho-
set receiver for infrared
audio signals – ›light as a
feather«

»RCI-102« · Specifications

Item no.: A-4043-0

Weight	52 g with battery
Colour and material	ABS plastic, black and red
Rechargeable battery, battery life	A100 NiMH battery, approx. 5 h
Modulation processes	FM, mono or stereo
Sound frequency transmission range	15 - 20.000 Hz
Operating frequencies	2.3 MHz and 2.8 MHz Possible selections: stereo reception or either frequency for mono reception
Harmonic distortion	<1%
Signal-to-noise ratio	Typ. 60 dB
Controls	Knob to adjust the volume; Balance can be adjusted with the help of a screwdriver
Maximum volume	Approx. 120 dB
Main switch	Integrated in the »receiver«



The wireless headphone set with inbuilt 2-channel IR-receiver is suitable for the use with emitters operating on 2.3 or 2.8 MHz. It reproduces audio signals in excellent sound quality. The easy-to-use headphones are equipped with a number of comfortable functions

including the adaptation of the sound pattern to individual listening preferences. The volume can be individually adjusted on each side of the headphone.

PR-22+ · Specifications

Item no.: A-4039-0

Receiver frequency	2.3 MHz & 2.8 MHz (can be switched)
Modulation	FM broadband
Reception	360°
Frequency response	60 Hz to 12 kHz \pm 3 dB
Signal-to-noise ratio	54 dB not weighted
Power supply	2 AAA alkaline batteries
Usage period, normal	20 hours
Power consumption	25 mA maximum; 20 mA typically
Maximum output	6 mW
Receiver lens	Infrared element with ambient light filter
Operating elements	ON/OFF, volume regulation left and right, channel selector switch
Colour	black
Weight	200 g



Tripod

Tripod for placement of PRO IR infrared emitters

Item no.: A-4986-0

The height adjustable stand is equipped with mounting components matching the respective receivers

- Pulls out to a maximum of 3 m
- Maximum load 20 kg

Rechargers for pocket receiver PR-22+

Single recharger

Item no.: A-4971-0

5-bay recharger

Item no.: A-4972-0

Teleloop (mono) 0.50 m

Item no.: A-4928-0

Connection to the pocket receiver for inductive audio transmission to hearing aids or CI systems via the T-coil.

Accessories for stethoset receiver RCI-102

Single-bay recharger

Item no.: A-4977-0

5-bay recharger

Item no.: A-4976-0

Recharger with 5 independent recharging bays for the receivers

12-bay recharger

Item no.: A-4974-0

Time-saving recharger for users who operate a larger number of the receivers

10-bay charger case, aluminium

Item no.: A-4183-0

Charging and storage case for 10 pieces RCI-102; contains two 5-bay chargers (A-4972-0)

Replacement battery A100

Item no.: A-4970-0

NiMH rechargeable battery, 180 mAh

Additional Silicone earpieces for stethoset receiver RCI-102

Silicone earpieces standard (2 pairs)

Item no.: A-4985-0

Silicone earpieces standard, sized package (24 pairs)

Item no.: A-4987-0

Silicone earpieces tapered shape (2 pairs)

Item no.: A-4988-0

Silicone earpieces tapered shape, sized package (24 pairs)

Item no.: A-4989-0

Silicone earpieces perforated (2 pairs)

Item no.: A-4970-0

Silicone earpieces perforated, sized package (24 pairs)

Item no.: A-4993-0

Accessories

The AUDIOropa portfolio includes the complete hardware program for the installation and application of infrared transmission systems.

This page provides examples of some of the essential components from the range of accessories. The complete range can be found at www.AUDIOropa.com

AUDIOropa

AUDIOropa is a division of the Humantechnik Group

The AUDIOropa portfolio focuses on audio technology for professional use - stationary and mobile. The portfolio includes

- Inductive loop systems
- Radio transmission systems
- Infrared transmission systems

The focal point of the application of these systems are solutions for acoustic accessibility within the scope of inclusion projects.

AUDIOropa systems prove their worth even under difficult acoustic conditions with an increase in audio quality and speech understanding for hearing impaired people, resulting from the integration of audiological technology.

Welcome to the dialog:

 **HUMANTECHNIK GmbH**

Im Wörth 25
D-79576 Weil am Rhein

Telefon: +49 (0) 76 21 / 9 56 89 - 0
Fax: +49 (0) 76 21 / 9 56 89 - 70

info@AUDIOropa.com
www.AUDIOropa.com

**HUMANTECHNIK GmbH
Vertriebsbüro Berlin**

Garibaldistraße 60
D-13158 Berlin

Tel.: +49 (0) 30 / 91 74 50 01
Fax: +49 (0) 30 / 91 74 50 02

humantechnik-buero-berlin@t-online.de
www.AUDIOropa.com

 **HUMANTECHNIK GHL AG**

Rastatterstrasse 9
CH-4057 Basel

Tel.: +41 (0) 61 / 6 93 22 60
Fax: +41 (0) 61 / 6 93 22 61

E-Mail: info@humantechnik.com
Internet: www.AUDIOropa.com



SMS Audio Electronique Sàrl

173 rue du Général de Gaulle
F-68440 Habsheim

Tel.: +33 (0) 389441400
Fax: +33 (0) 389446213

E-Mail: sms@audiofr.com
Internet: www.AUDIOropa.com

 **Hoorexpert BV**

Gildenstraat 30
NL-4143 HS Leerdam

Tel.: +31 (0)345 / 632393
Fax: +31 (0)345 / 632919

info@hoorexpert.nl
Internet: www.hoorexpert.nl

 **Sarabec Ltd**

15 High Force Road
GB-TS2 1RH Middlesbrough

Tel.: +44 (0)1642 247789
Fax: +44 (0)1642 230827

mail@sarabec.co.uk
Internet: www.sarabec.com